

MOREK

Creating a better future for You



Morek EV AC Charger

Dynamic Load Management Installation Manual

ev.morek.eu

Not just for private use – find a suitable model and service for an apartment building, parking lot, commercial building, etc.

Smart charge (WiFi, LAN, and/or optional 4G)

Use it at a private house, apartment building, or work. Charge and share chargings. Perfect for public charging with Powered by Vonktech charge point & payment platform.

Plug & charge

For private use. No internet connection and smart features. Just plug & charge.



***Network charger
3.8 " LCD display
LAN, WiFi, RFID
5m cable
Type 2 connector***



***Network charger
3.8 " LCD display
LAN, WiFi, RFID
Type 2 socket***



***Plug & Charge
LED indicator
5m cable
Type 2 connector***

The installation process is simplified for maximum efficiency. The charger comes with a preset configuration and easy access with the Morek EV Tool APP to reduce setup time.



Contents

<i>CT installation and wiring</i>	<i>1</i>
<i>Meter installation and wiring</i>	<i>3</i>
<i>DLM - configuration</i>	<i>4</i>


DLM - CT installation and wiring

External CT or electric meter can be connected for household load management as the charger only reads (collects) external CT or Meter data. Additional configuration of CT or Meter also is needed through the Morek EV Tool APP to activate the DLM functionality and set the correct parameters.

The charger communication mode is as follows:

Num	1	2	3	4
Define	CT +	CT -	RS485A	RS485B
Type	CT (Current Transformer)		Meter(Power meter)	
Wiring				

Use CT wiring as follows:

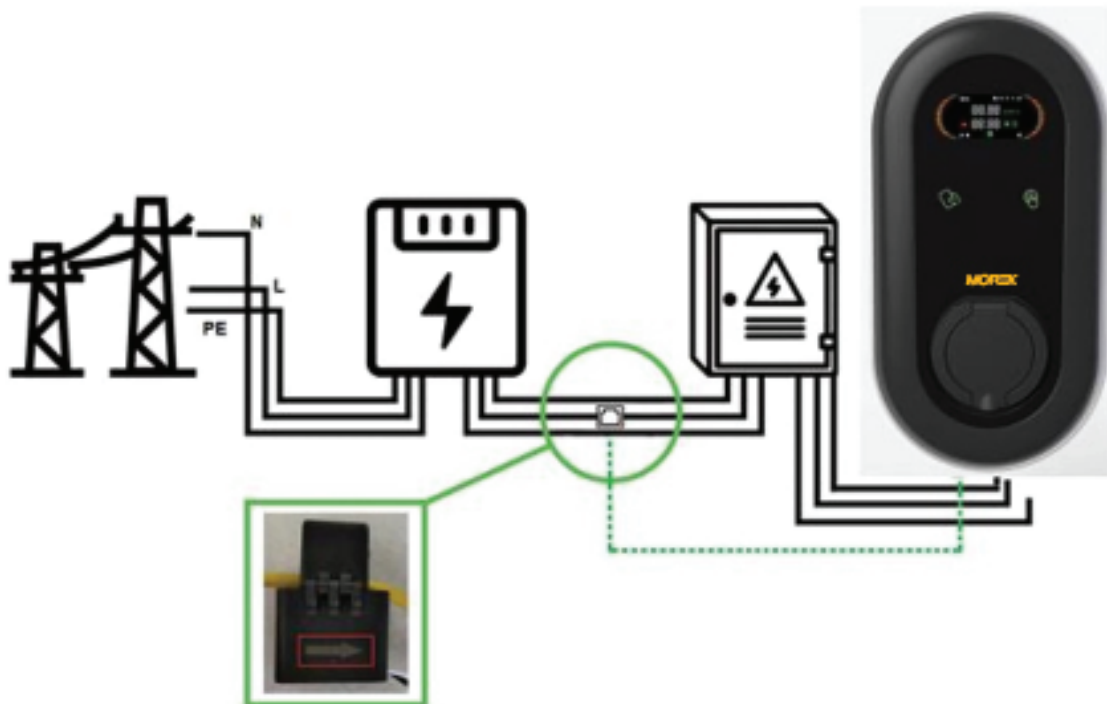


Current direction, input towards home:


- 7KW one-phase electricity, need to use 1 CT, ring CT covers L .
- 22KW three-phase electricity, need to use 3 CTs, ring CT covers L1, L2, L3

DLM - Meter installation and wiring

Use the electric meter wiring as shown below:

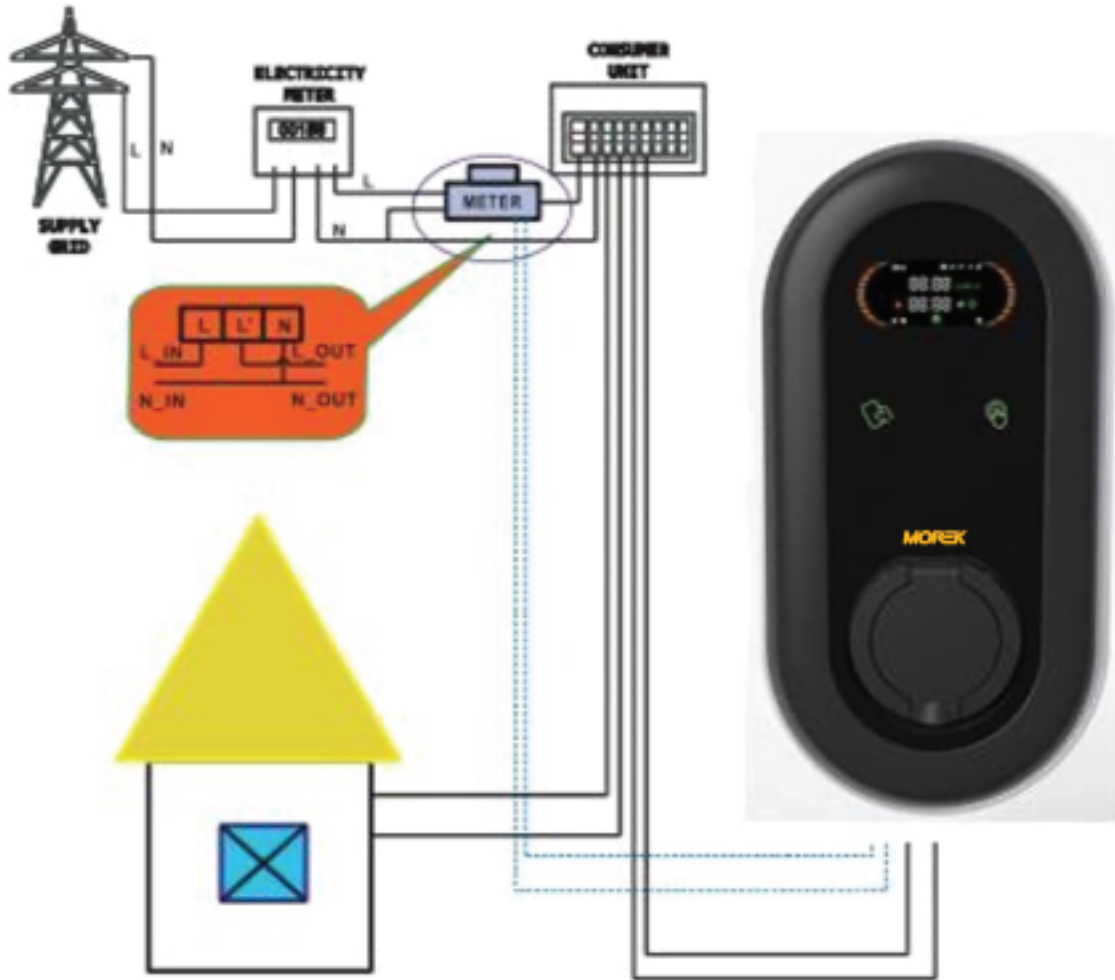

The meter MDBUS protocol, the default meter address is 0x01 The flow chart is as follows:

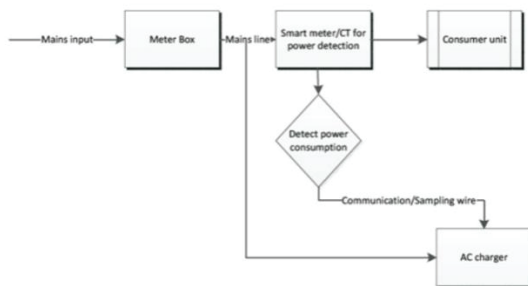

Block diagram of power adjustment

Power distribution(0:Disable,1:Enable):	<input type="text" value="0"/>	Home Power(A):	<input type="text" value="20"/>
External PowerMeter Addr:	<input type="text" value="1"/>	Home Power(0 CT,1 Meter):	<input type="text" value="0"/>

DLM - configuration

Use the Morek EV TOOL configuration APP to set the charger parameters.

If an external CT is installed to sample current from the home grid, the DLM function can be used to control the output current. To activate the DLM function, turn on: Power Distribution Enable. The Sampling Method item value needs to be CT and Home Power Current is set to a value smaller than the maximum distribution of the current in your home.

Step 1: Set the parameter Power distribution (0: Disable, 1: Enable) to 1, and enable the intelligent management of household load.

Step 2: Set the Home Power (A) parameter, that is the maximum input current of the household (refer to the rated current of the household input switch), for example, one-phase 100A. The charger adjusts the real-time power according to this current to achieve the over-load function.

Step 3: Set Home Power (0: CT, 1: Meter) and External Power Meter Address to select and address settings when selecting a meter.

The default value is CT. When selecting the meter, you need to set the meter address, Modbus protocol, the default meter address is 0x01.











To save the settings please scroll down in the application and click Set.


After confirming that settings are saved, move back to the login screen and disconnect the Bluetooth connection by clicking the Disconnect text. The disconnection will make the charger restart and a long single beep will confirm that the settings were changed and the charger has restarted.

Manage chargings the easy, effective, and versatile way

Manage electric car charging locally or in various locations across Europe from one system.

Morek AC chargers can be installed either on a wall or pole which enables infrastructure planning for indoor or outdoor parking spaces more exible.

-  Morek Finland
-  Morek Estonia
-  Morek Latvia
-  Morek Lithuania
-  Morek Poland
-  Morek Czech Republic
-  Morek Slovakia
-  Morek France
-  Morek Bulgaria
-  Morek Portugal

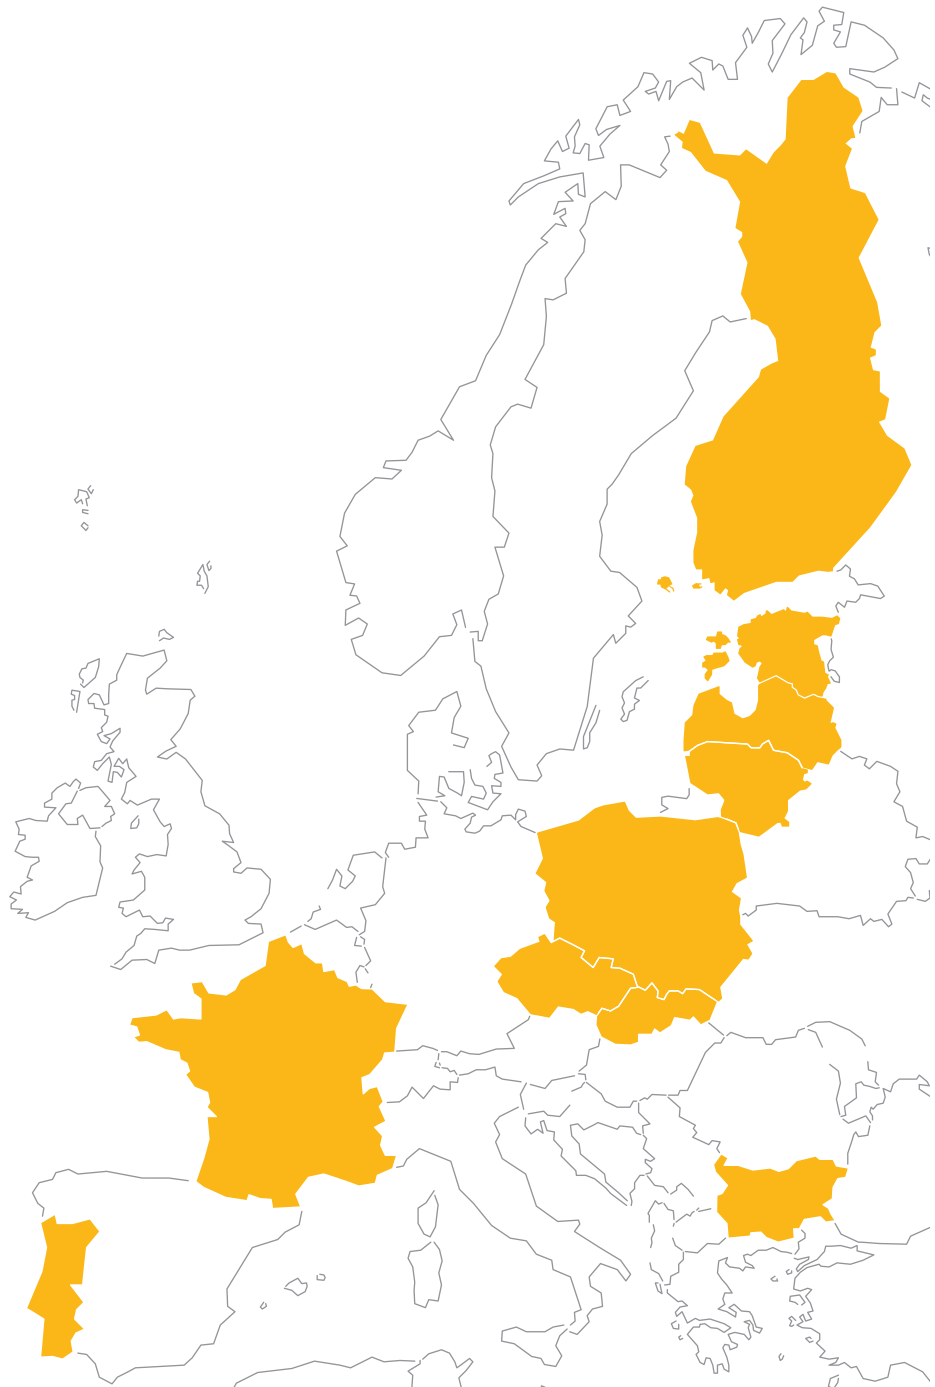

Questions? Make us work harder!

More information about Morek EV chargers and discussions about EV user cases can be found from ev.morek.eu

